




Assembly Instructions

Cupholder


Tools Needed: #2 square bit screw driver or power driver, No drilling is required.
All the necessary holes are predrilled.



Parts

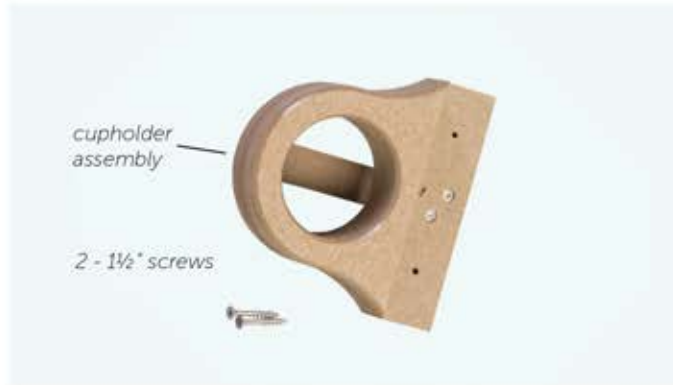

Step 2 — Attach under chair arm

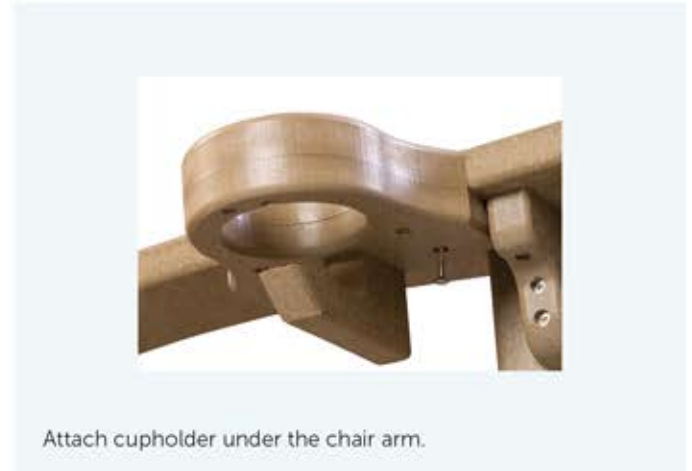

Step 1 — Start Screws



Congratulations!
Your **Cupholder** attachment
is ready to enjoy!