




Assembly Instructions

Van Buren Coffee Table

Tools Needed: hammer, $\frac{7}{16}$ " wrench, #2 square bit screw driver or power driver, punch
No drilling is required. All the necessary holes are predrilled. Bolts fit snugly in the holes.
You may need to use a hammer to drive the bolts through the holes.



Parts

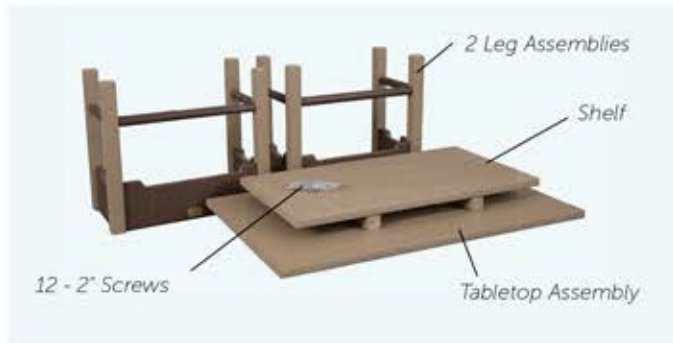

Step 2 — Install Bottom Shelf

2" Screws, Shelf



Step 1 — Install Legs

2" Screws, Tabletop Assembly, Leg Assemblies



Lay the table top upside down on a protected surface such as cardboard or blankets.
Place leg assemblies snugly against the tabletop crosspieces.
Secure each leg assembly with four screws using the pilot holes.

Place shelf in line with bottom rails on leg assembly and fasten with screws in the pilot holes. Be sure that screws go into the pilot holes in the leg assembly.



Congratulations!
Your **Van Buren Coffee Table**
is ready to enjoy!